

Tumble Dryer Instructions

WARNING! RISK OF FIRE!
ALWAYS CLEAN THE FILTER BEFORE EVERY USE (SEE BELOW)

WARNING! WHEN THE TUMBLE DRYER IS IN USE THE DRUM AND DOOR MAY BE VERY HOT. DO NOT OPEN TUMBLE DRYER DOOR BEFORE END OF DRYING CYCLE UNLESS ALL ITEMS ARE QUICKLY REMOVED AND SPREAD OUT TO DISSIPATE HEAT

TO OPEN DOOR

Pull on handle on right side of door to open.

TO CLEAN FILTER

Pull filter on rim of drum upwards.

Open by gently pulling two halves apart

Remove all lint and throw lint in bin

Snap filter back together again and replace securely in machine

TO OPERATE DRYER

Open door and load laundry. **DO NOT EXCEED MAX LOAD**

Clean filter

Gently close door until it "Clicks"

Turn the Programme Selector dial to required drying programme. **NOTE:** a timed programme is simplest to use! There is a button to select lower temperature.

Press start button

If the door is opened during the cycle it will be necessary to close the door and press Start button once again to restart

Dryer will enter "Cool down" phase towards the end of the cycle, Allow this to be completed and wait until the machine comes to a stop.

(Until door is opened or the machine is switched off, the drum will continue to rotate intermittently to minimize creasing).

Please note it is the guest's responsibility to ensure that laundry items are suitable for tumble-drying.

NEVER DRY ARTICLES WHICH HAVE BEEN TREATED WITH A DRY CLEANING FLUID OR RUBBER CLOTHES (DANGER OF FIRE OR EXPLOSION).