



OVEN INSTRUCTIONS

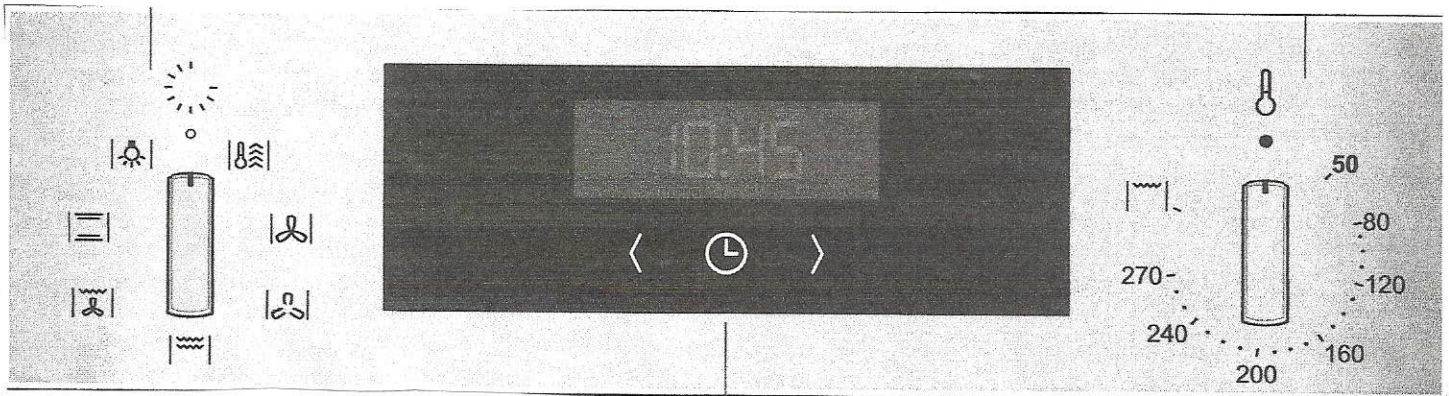

SETTING THE TIME

In the event of a power cut, the time display may be flashing and it will be necessary to reset the time.

Make sure that the function selector is set to "off".
The time starts at "12.00"

1. Use the < or > to set the time.
2. Touch the  to confirm and the current time will be shown on the display


SWITCHING THE OVEN ON OR OFF


Use the function selector to switch the oven on or off. Turning the function selector to any position other than OFF switches the oven on. To turn the oven off, always turn the function selector to the OFF position.

Note: The cooling fan continues to run for a few minutes after the oven has been switched off.

SETTING THE HEATING FUNCTION AND TEMPERATURE

1. Use the function selector to set the heating function required (see below)
2. Use the temperature selector to set the temperature or grill setting.

The appliance will start to heat after a few seconds and the  symbol appears in the display.

Once the  symbol goes out, the desired temperature has been reached and the oven is ready for your food.

Should it not be possible to operate the settings on the oven, the "Child Lock" function may have been inadvertently activated. Deactivate by pressing and holding the Button for approx.. 5 seconds.

OVEN FUNCTIONS

The main functions that you will need to use on the oven are:



Circo Therm hot air (Basically a fan oven)



Grill (Heating element at top of oven grills food placed beneath)



Top/Bottom heating (Basically a NON-fan oven).