

WASHING MACHINE INSTRUCTIONS

To run a wash cycle

Load laundry and close door securely. Max load is 9kg but smaller for some programmes. Once cycle starts, door will remain locked until cycle ends.

Place detergent and softener in detergent drawer. Drawer has 3 compartments. Left to right:

MAIN WASH SOFTENER PREWASH

Select wash cycle using Programme Selector Button. See recommendation below

Customise the wash cycle where permitted using the digital touch screen eg spin speed/temperature. NB Load weight permitted decreases in some instances especially when shortening programme

HANDY TIP!

We recommend FULL FAST LOAD which can be shortened as desired but see above note re wash weights

Start programme by pressing START/Pause button (5). Door will lock and Door Locked Icon will illuminate

To change a wash cycle while machine is running

Press Start/Pause button

Select new desired cycle using Programme Selector dial

Press Start/Pause button again to start new programme

To open door while wash cycle is running

This can only be done if the water level is low enough

Press Start/Pause button. If door locked icon goes off then door can be opened.

Open door. Add/remove items as required.

To re start, close door and press Start/ Pause button again.

If door icon does not go off, then change programme to Pump+Spin to drain water and start again once that programme has finished.

