

## HOB INSTRUCTIONS

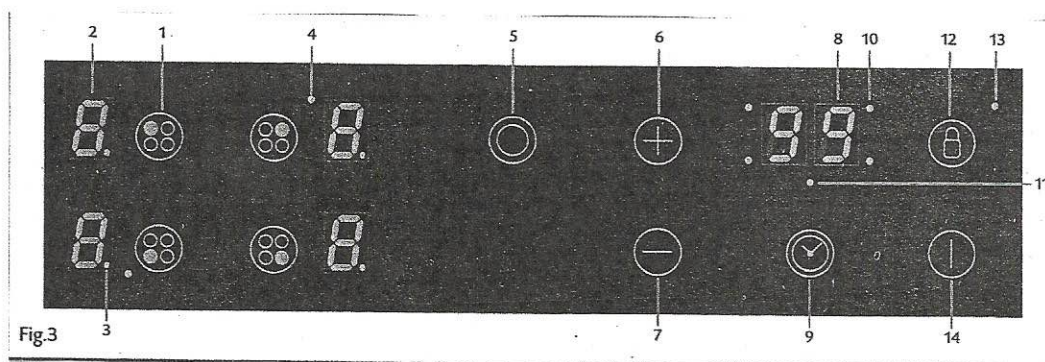


Fig.3

### KEY:

1. ZONE ("ring") KEY
2. ZONE TEMPERATURE DISPLAY
3. ZONE INDICATOR LIGHT
4. DUAL ZONE INDICATOR
5. DUAL ZONE KEY
6. INCREASE KEY
7. DECREASE KEY
12. CHILDLOCK KEY
13. CHILDLOCK INDICATOR
14. POWER KEY

Please note that ceramic hobs are easily damaged so PLEASE take care when moving pans across the surface. Wipe spills up immediately and use Ceramic Hob cleaner provided to remove marks.

### HOW TO USE THE HOB

#### TO SWITCH HOB ON

Touch and hold Power Key (14) until all zone displays read 0. If a zone is not set within 10 secs, the hob will automatically switch off.

#### TO SWITCH ON A ZONE

Touch one of the Zone Keys (1) for the zone you wish to use. The Zone Indicator (3) for your selected zone will illuminate.

Touch and hold the Increase Key (6) to select power level from 1 to 9

You can decrease the power level by using the Decrease Key (7)

Power selected will be shown in the relevant Zone Display (2)

There is a window of 10 seconds to complete selecting temperature.

#### TO ADJUST POWER LEVEL ONCE SET

Touch the Zone Key (1) for the zone you wish to adjust

Touch and hold the Increase or Decrease Keys to adjust power as required.

#### TO USE THE DUAL ZONE (ONLY ON TWO ZONES)

This increases the size of the zone area that will heat up. Once one of the dual zones is switched on, touch the Dual Zone Key (5) to turn the dual zone on.

#### TO SWITCH OFF A ZONE

Touch the Zone Key for the zone you wish to turn off.

Touch and hold the Decrease Key until the Zone Display shows 0

#### TO SWITCH OFF HOB

Touch and hold Power Key (14)